

## Arrangement 4HM centrifugal blower

Models PB - PBS - SPB - LM - LMF

INSTALLATION - OPERATION - MAINTENANCE

CF-09-IOM-24 ISSUED 05/2024

READ AND UNDERSTAND THIS MANUAL PRIOR TO OPERATING OR SERVICING THIS PRODUCT



PB Centrifugal Blower

Blower Serial Number \_\_\_\_\_

---

## overview

---

### Note

*The following defined terms are used throughout this manual to bring attention to the presence of hazards of various risk levels, or to important information concerning the life of the product.*

---

### ⚠ Warning

*Indicates presence of a hazard which can cause severe personal injury, death or substantial property damage if ignored.*

---

### ⚠ Caution

*Indicates presence of a hazard which will or can cause personal injury or property damage if ignored.*

---

### Note

*Indicates special instructions on installation, operation or maintenance which are important but not related to personal injury hazards.*

*Read entire manual, including Initial Unit Startup before attempting to install and operate this equipment.*

---

## Specifications

Blower Serial Number \_\_\_\_\_ Mfg Date \_\_\_\_\_

**Note:** The serial number above is a required reference for any assistance. It is stamped on the lower nameplate.

Blower Specifications

Model \_\_\_\_\_ Arrangement \_\_\_\_\_ Rotation \_\_\_\_\_ Discharge \_\_\_\_\_

Wheel Size and Type \_\_\_\_\_

Blower Performance Data

CFM \_\_\_\_\_ SP \_\_\_\_\_ Motor bhp \_\_\_\_\_

Density \_\_\_\_\_ Altitude ft \_\_\_\_\_ Airstream Temperature \_\_\_\_\_ °F

Fan RPM \_\_\_\_\_ Maximum Safe Fan RPM \_\_\_\_\_ **Do Not Exceed this RPM**

Motor Data: (This section is completed only if the motor was supplied by Cincinnati Fan)

hp \_\_\_\_\_ RPM \_\_\_\_\_ Voltage \_\_\_\_\_ Phase \_\_\_\_\_

Hz \_\_\_\_\_ Frame Size \_\_\_\_\_ Enclosure \_\_\_\_\_ Efficiency \_\_\_\_\_

If Motor is EXP, Class(es) and Group(s) are \_\_\_\_\_

Manufacturer's Model Number \_\_\_\_\_ CFV Part Number \_\_\_\_\_

---

### Note

***All Cincinnati Fan products are packaged to minimize any damage during shipment. The freight carrier is responsible for delivering all items in their original condition as received from Cincinnati Fan. The individual receiving this equipment is responsible for inspecting this unit for any obvious or concealed damage. If any damage is found, it should be noted on the bill of lading before the freight is accepted and the receiver must file a claim with the freight carrier.***

---

## contents

---

### Note

*This manual contains vital information for the proper installation and operation of your blower fan. Carefully read the manual before installation or operation of the blower fan and follow all instructions. Save this manual for future reference.*

General.....	4
- Unpacking and Handling .....	4
- Safety Instructions and Accessories .....	4
Installation.....	6
- Vibration.....	6
- Mounting Methods .....	6
- Duct Work Connections .....	7
- Safety Guards.....	7
- Dampers and Valves .....	7
- Set Screw and Taper-Lock Bushing Torque Values .....	8
Electrical .....	8
- Disconnect Switch.....	8
- Motor .....	9
- Maximum Blower Speed.....	11
Initial Unit Startup .....	12
- Pre-Startup and Post-Startup Checks .....	12
- Vibration.....	13
Routine Inspection and Maintenance.....	16
- Hardware.....	16
- Motor Bearing Lubrication.....	16
- Wheel Balance.....	16
- Vibration.....	17
- Dampers and Valves .....	18
- Safety Equipment and Accessories.....	18
Ordering Replacement Parts .....	18
Troubleshooting.....	19
Long Term Storage.....	20
Warranty, Limits of Liability, Responsibility and Returns.....	22
Parts Drawing .....	25

---

### Long Term Storage Notice

If this blower will not be installed and put into operation within 30 days, refer to the **Long Term Storage** Instructions on page 20. Failure to follow all applicable long term storage instructions, will void your warranty. This blower should be stored indoors in a clean, dry location.

---

## general

---

### Receiving

### Unpacking

Be careful not to damage or deform any parts of the blower when removing it from the packaging container. All the packaging material should be kept in the event the blower needs to be returned.

### Handling

Handling of the blower should be performed by trained personnel and be consistent with all safe handling practices. Verify that all lifting equipment is in good operating condition and has the proper lifting capacity. The blower should be lifted using well-padded chains, cables or lifting straps with spreader bars. Lifting eye locations are provided in the blower base. **Never** lift the blower by an inlet or discharge flange, blower or motor shaft, motor eye bolt, or any other part of the blower assembly that could cause distortion of the blower assembly.

---

## Safety Instructions and Accessories

### Safety Instructions:

All installers, operators and maintenance personnel should read AMCA Publication 410-96, *Recommended Safety Practices for Users and Installers of Industrial and Commercial Fans*. This manual is included with the blower.

### Sound

Some blowers can generate sound that could be hazardous to personnel. It is the responsibility of the user to measure the sound levels of the blower and/or system, determine the degree of personnel exposure, and comply with all applicable safety laws and requirements to protect personnel from excessive noise.

### Air Pressure and Suction

In addition to the normal dangers of rotating machinery, the blower can present additional hazards from the suction or pressure created at the blower inlet or discharge.

***Suction at the blower inlet can draw materials into the blower where they become high velocity projectiles at the discharge and cause severe personal injury or death.***

It can also be extremely dangerous to persons in close proximity to the inlet or discharge as the forces involved can overcome the strength of most individuals.

---

### Warning

---

## general

---

### ⚠ Caution

***Never operate a blower with a non-ducted inlet and/or discharge. If the blower inlet and/or discharge is non-ducted, it is the users responsibility to install an inlet and/or discharge guard.***

#### Temperature

Many blowers, blower components and all motors operate at temperatures that could burn someone if they come in contact with them. If this potential hazard could exist in your installation, steps must be taken by the user to protect anyone from coming in contact with this equipment.

**Spark Resistance:** Per AMCA Standard 99-0401-86 and ISO 13499

---

### ⚠ Warning

***No guarantee of any level of spark resistance is implied by spark resistant construction. It has been demonstrated that aluminum impellers rubbing on rusty steel can cause high intensity sparks. Air stream material and debris or other system factors can also cause sparks.***

#### Safety Guards

All moving parts must be guarded to protect personnel. Safety requirements can vary, so the number and types of guards required to meet company, local, state and OSHA regulations must be determined and specified by the actual user or operator of the equipment.

---

### ⚠ Caution

***Never start any blower without having all required safety guards properly installed. All blowers should be checked on a regular schedule, for missing or damaged guards. If any required guards are found to be missing or defective, the power to the blower should be immediately turned off and locked out in accordance with OSHA regulations. Power to the blower should NOT be turned back on until the required guards have been repaired or replaced.***

This blower can become dangerous due to a potential "windmill" effect, even though all electrical power has been turned off or disconnected. The blower wheel should be **carefully** secured to prevent any rotational turning **before** working on any parts of the blower/motor assembly that could move.

#### Access or Inspection Doors

---

### ⚠ Caution

***Never open any access or inspection doors while the blower is operating. Serious injury or death could result from the effects of air pressure, air suction or material that is being conveyed. Disconnect or lock out power to the blower and let the blower wheel come to a complete stop before opening any type of access or inspection door.***

---

# installation

---

## Installation

### Vibration

Before any mounting method is selected, the user should be aware of the effects vibration will have on the blower, motor and other parts. Improper blower installation can cause excessive vibration causing premature wheel and/or motor bearing failure, that is not covered under warranty.

---

**⚠ Caution**

***Shut the blower down immediately if there is any sudden increase in vibration.***

---

### Mounting Methods

An Arrangement 4HM blower is an Arrangement 4, direct drive blower without the bottom base under the motor. If the motor being supplied is a foot mounted motor, an angle base must be used to connect the blower to the motor. A C-Face motor can be bolted directly to the housing without using an angle bracket. Most Arrangement 4HM blowers are supplied with an inlet or discharge flange for mounting the blower to some type of equipment. Some are supplied with both inlet and discharge flanges.

#### Mounting Blower by Inlet Flange Only

- **With motor shaft horizontal** (parallel with floor):

If mounting the blower by the inlet flange only and with the motor shaft horizontal (parallel with floor), it is very likely additional support under the motor will be required.

- **With motor shaft vertical** (perpendicular to floor):

This is the best way to mount an Arrangement 4HM blower as long as the mounting plate the flange will be bolted to is rigid enough to support the weight of the blower/motor assembly.

#### Mounting Blower by Discharge Flange Only

- **With motor shaft horizontal or vertical:**

Because of the forces involved, it will most likely be necessary to add additional support under the motor. Mount the blower and take the vibration readings as shown in **Figure 2**. If they exceed the maximums shown in **Figure 3**, you will need to add additional support.

---

## installation

### **Duct Work Connection**

All ducting or accessories added by the user, should be independently supported. **Do Not** use the blower/motor assembly to support any additional weight. Inlet and/or discharge duct elbows should be located a minimum of two blower wheel diameters from the blower. Any duct elbows located closer than two wheel diameters to the blower inlet or discharge **will** reduce the air performance and blower efficiency. Any duct elbows near the blower discharge should be in the same rotational direction as the blower rotation.

**Non-Ducted Blower Inlet:** Any blower with no ducting on the inlet **must** have an inlet guard. The blower should be located so the blower inlet is, at least, one wheel diameter away from any wall or bulkhead to eliminate a reduction in air flow.

**Non-Ducted Blower Discharge:** Any blower with no ducting on the discharge **must** have a discharge guard.

### **Safety Guards**

Cincinnati Fan offers guards, as optional, to keep your blower in compliance with OSHA safety regulations. These include inlet or discharge guards. Any blowers built with high temperature construction, a “heat slinger guard” is standard. It is the responsibility of the user to make sure this blower meets all local, state and OSHA safety regulations. If you have a specific guard requirement not covered by OSHA, please contact the local Cincinnati Fan sales office for assistance.

### **Dampers and Valves – Airflow control devices**

If the blower is supplied with any type of air flow control device, it should be closed before initial startup of the blower to minimize overloading of the motor. Any airflow control device, with bearings, should be maintained in accordance with the manufacturer’s instructions. Any air flow control device, with an automatic control mechanism, should be adjusted per the manufacturer’s recommendations

---

## installation

### Set Screw and Taper-Lock Bushing Torque Values

All blower wheel set screws are tightened to the proper torque prior to shipment. Some wheels may have taper-lock hubs and split, taper-lock bushings to secure the wheel to the blower shaft.

---

#### Note

***Check all set screw or taper-lock bushing torques. Forces encountered during shipment, handling, rigging and temperature can affect factory settings. For correct torque values, see Tables 1 and 2.***

---

Table 1

Diameter - Threads/Inch	Hex Wrench Size (across flats)	Required Torque in·lb <sub>f</sub>
1/4-20	1/8"	65
5/16-18	5/32"	165
3/8-16	3/16"	228
7/16-14	7/32"	348
1/2-13	1/4"	504
5/8-11	5/16"	1104

---

Table 2

Taper-Lock Busing Size	Required Torque in·lb <sub>f</sub>
H	95
B	192
P	192
Q	350
R	350

---

#### ⚠ Caution

***Set screws should never be used more than once. If the set screws are loosened, they must be replaced. Use only knurled, cup-point, set screws with a nylon locking patch.***

---

## Electrical

### Disconnect Switch

All blower motors should have an independent disconnect switch located in close visual proximity to turn off the electrical service to the blower motor. **Disconnects must be locked out in accordance with OSHA “lock out-tag out” procedures any time inspection or maintenance is being performed on the blower and/or motor assembly.** The “lock out-tag out” procedure should be performed by a licensed electrician or authorized personnel.



---

## installation

All disconnects should be sized in accordance with the latest NEC codes (National Electric Codes) and any local codes and should be installed only by a licensed electrician. “Slow blow” or “time delay” fuses or breakers should be used since the initial start-up time for the blower motor, although rare, can be up to 10 seconds.

### Motor

---

#### Warning

*All wiring connections, inspection and maintenance of any motor must be performed by a licensed electrician in accordance with the motor manufacturers recommendations, all electrical codes and OSHA regulations. Failure to properly install, make wiring connections, inspect or perform any maintenance to a motor can result in motor failure, property damage, explosion, electrical shock and death.*

1. **Do Not connect or operate a motor without reading the motor manufacturers instructions supplied with the motor.** The basic principle of motor maintenance is: Keep the motor clean and dry. This requires periodic inspections of the motor. The frequency of the inspections depends on the type of motor, the service and environment it will be subjected to and the motor manufacturers instructions.
2. **Cleaning:** Cleaning should be limited to exterior surfaces only. Follow motor manufacturers cleaning instructions.
3. **Lubrication:** Most small motors have sealed bearings that are permanently lubricated for the life of the motor. Some larger motors have grease plugs that should be replaced with grease fittings to perform re-lubrication. These motors, or any motor with grease fittings, should be lubricated in accordance with the motor manufacturers recommendations. Lubrication frequency depends on the motor horsepower, speed and service. **Be sure** you use compatible grease and **Do not** over grease.
4. **Location:** If the motor will be outside and subjected to the weather, it is recommended that a weather cover be installed to keep rain and snow off of the motor. No motors are guaranteed to be “watertight”. Be careful to allow enough openings between the motor and the motor cover to let the motor “breathe”. If the back end of the motor is covered, the cover should be no closer than 3" to the back of the motor for proper ventilation.



---

## installation

5. **Wiring Connections:** All wiring connections should be made for the proper voltage and phase as shown on the motor nameplate. Connections should follow the motor manufacturers recommendations as shown on the wiring schematic. This wiring diagram will be located on the outside of the motor, inside of the motor conduit box or on the motor nameplate. Reversing some wires might be necessary to get the correct blower rotation.
6. **Motors with Thermal Overload Protection:** If a motor is equipped with thermal overloads, the thermal overload must be wired per the wiring schematic to be operable. There are three types of thermal overloads:
  - Automatic:** These will automatically shut the motor down if the internal temperature exceeds the design limits.

---

### ⚠ Caution

***Make sure you lock out the power to the motor before inspecting any motor with automatic thermals, when the thermals cool down, they will allow the motor to automatically start up again, unless you have locked out the power to the motor.***

**Manual:** These motors will have a button on them. If the motor overheats, it will shut down. After you have inspected the motor and eliminated the over-heating problem, you will need to “reset” it by pushing the button. Lock out the power **Before** inspecting the motor.

**Thermostats:** This type of thermal is a temperature sensing device **only**. If the motor overheats, the thermostats will open or close (depending on the type) and send a “signal” to the electrical box. **They will not turn the motor off.** These are pilot circuit devices that must be connected to the magnetic starter circuit.

7. **Explosion Proof Motors:** No motor is explosion proof. Explosion proof motors are designed so if there is an explosion within the motor, the explosion will be contained inside the motor and not allowed to get out to the atmosphere. All explosion proof motors must be selected based on the atmosphere and/or the environment the motor will be operating in. Explosion proof motors are designed, rated, and labeled for their operating conditions based on Classes, Groups and T Codes. The Class, Group and T code of an EXP motor must be selected based on the atmosphere and/or environmental conditions the motor will be operating in. Consult the NEC (National Electric Code) and the NFPA (National Fire Protection Association) for the proper EXP motor Class, Group and T Code required for your specific application and location.

---

## installation

---

### **⚠ Warning**

*If an explosion proof motor is used in an area containing volatile liquids, gases, fumes or dust for which the motor was not designed to operate in, an explosion and/or fire may occur.*

---

### **Note**

*All EXP motors have some type of thermal overload as required by UL (Underwriters Laboratories).*

*All EXP motors are required to have the UL and CSA (Canadian Standards Association) listing numbers on the motor name plate or on a separate plate attached to the motor. The Class, Group and T Code the motor is designed for must also be listed.*

8. **Normal Motor Operating Temperatures:** The normal operating temperature of a fully loaded, open type, electric motor operating in a 70°F (21°C) ambient temperature is 174°F (79° C).

---

### **Maximum Blower Speed and Motor Speed Controllers:**

**If you will be using any type of motor speed controller with this blower, do not exceed the maximum safe blower speed.** Installing and using a speed control device requires special training and certification as required by the speed control manufacturer. See the manufacturers instructions for proper use, installation and wiring connections for the maximum speed settings. It may be necessary to “block out” some speeds to eliminate a resonant vibration problem. The maximum safe blower speed is shown on the data sheet shipped with the blower. If you have lost the data sheet, contact Cincinnati Fan or the sales office for your area. You must have the serial number from the blower name plate for us to determine the maximum safe blower speed.

Cincinnati Fan will only extend the motor manufacturers warranty, when used with a speed controlling device, if the motor has the words **Inverter Duty** marked on the motor name plate. If the motor does not have Inverter Duty marked on the motor name plate, and you have a motor failure, you will be required to contact the motor manufacturer for any service or warranty claims.

---

# operation

---

## Initial Unit Startup

**Pre-Startup and Post-Startup Check** (Check blocks as each step is completed. Retain for you records)

**Note** *Failure to complete and document all the following Pre-Startup checks, Post-Startup checks and Vibration checks, could void all warranties.*

Pre-Startup Check completed by: \_\_\_\_\_ Date \_\_\_\_\_  
Eight Hour Post-Startup Check completed by: \_\_\_\_\_ Date \_\_\_\_\_  
Three-Day Post-Startup Check completed by: \_\_\_\_\_ Date \_\_\_\_\_  
***Make sure power to the motor is locked out before starting pre-start or post-start checks.***

- 1    If possible, **Carefully** spin the blower wheel by hand to ensure it rotates freely and no rubbing or clicking noise is heard.
- 2    Check all blower, foundation and duct work hardware to make sure it is tight.
- 3    Check the blower wheel set screws to make sure they are tight per **Table 1**.
- 4    If the blower wheel has a taper-lock bushing, make sure the bolts are tightened per **Table 2**.
- 5    Make certain there is no foreign material in the blower housing (optional) that can become a projectile.
- 6    Make sure any inspection doors are securely bolted or locked.
- 7    Ensure all electrical power components are properly sized and matched for your electrical system.
- 8    Check that all required guards are properly secured.
- 9    Any dampers should be fully opened and closed to make sure there is no binding or interference.
- 10    If the blower is mounted on an elevated support structure, make sure the structure is welded at all the joint connections, welds have not cracked and the structure is properly braced to prevent "side sway".
- 11    Close any dampers to minimize the load on the motor, especially on blowers with high temperature construction. **Never** subject a **cold** blower to a **hot** gas stream. If the blower will be handling "hot gases" greater than 150°F (65°C) it is imperative that the blower be subjected to a gradual rate of temperature increase, not to exceed 15°F/minute (8°C/minute). The same temperature limits are also important when the blower is experiencing a drop in temperature until the temperature drops down to 150°F (65°C). Only, when the entire blower has reached an equilibrium temperature of 150°F (65°C), or less, should the power be turned off.
- 12    Make sure the power source connections to the blower motor are per the motor manufacturer's instructions.
- 13    Make sure the blower wheel is stationary prior to startup. **Starting a blower with a wheel that is rotating backwards can cause wheel damage.**

## operation

Pre-Startup Check completed by: \_\_\_\_\_ Date \_\_\_\_\_

Eight Hour Post-Startup Check completed by: \_\_\_\_\_ Date \_\_\_\_\_

Three-Day Post-Startup Check completed by: \_\_\_\_\_ Date \_\_\_\_\_


- 14    Apply power to the blower motor momentarily (bump start) to check for proper blower wheel rotation. If the blower is rotating in the wrong direction, reconnect the motor leads per the motor manufacturer's wiring schematic. **Blower rotation is determined by viewing the blower from the motor side of the blower, NOT from the inlet side.** After reconnecting the leads, repeat this step. See **Figure 1**.
- 15    Apply power to the motor and let it come up to full speed. Turn off the power. Look and listen for any unusual noise or mechanical abnormality while the blower wheel is still spinning. If any are noticed, lock out the power, wait for the blower wheel to come to a complete stop, locate the cause and correct it.
- 16    Unlock power and start the blower.
- 17    Measure, record and keep the following motor data for future reference and comparison: **(Single phase motors will only have L1 and L2 leads)**

**Amperage draw on each motor lead: L1 \_\_\_\_\_ L2 \_\_\_\_\_ L3 \_\_\_\_\_**

(Running amps **should not** exceed the motor name plate amps for the voltage being operated on).

**Voltage coming to motor leads: L1 \_\_\_\_\_ L2 \_\_\_\_\_ L3 \_\_\_\_\_**

(Should be about the same input voltage on all leads)

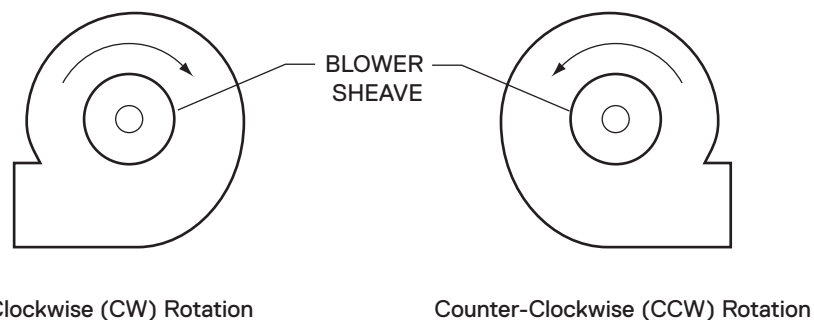

**Figure 1**

### Vibration

The blower was balanced at the factory to comply with ANSI/AMCA Standard 204-05, Category BV-3. However, rough handling in shipment and/or erection, weak and/or non-rigid foundations, and misalignment of the belts and/or sheaves may cause a vibration problem after installation. After installation, the vibration levels should be checked by personnel experienced with vibration analysis and vibration analysis equipment.



## operation


### ⚠ Caution

*The blower Should Not be operated if the vibration velocity of the blower exceeds 0.50 inches per second, filter out, if the blower is rigidly mounted. If the blower is mounted on isolators or on an isolator base, it Should Not be operated if the vibration velocity of the blower exceeds 0.65 inches per second, filter out.*

### ⚠ Warning

*If the blower is going to be conveying material, it is the user's responsibility to periodically turn the blower off and lock out the power. The blower wheel should then be checked for material build-up and/or erosion. If material has built up on any parts of the wheel, it Must be removed and cleaned before it is put back into service. If any parts of the wheel have been eroded, the wheel Must be replaced. Failure to perform this inspection can cause excessive vibration that will damage the blower and/or bearings. When vibration becomes excessive, it will lead to complete blower failure that could cause property damage, severe personal injury and death. The user must determine the frequency of this inspection based on the actual circumstances of their operation, But checking the vibration readings should Never exceed a 12 month period. For the AMCA/ANSI standard for vibration limits, see Figure 4.*

Vibration readings for direct driven blowers should be taken at the top, sides and end of the motor as per **Figure 2**. After you have taken your vibration readings, write them down in the spaces below and keep for future comparison

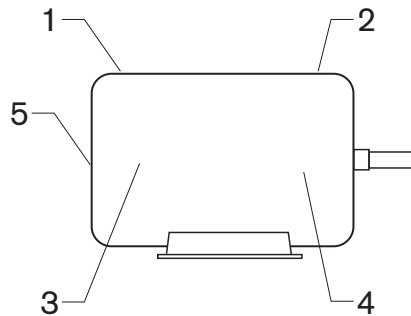

**Figure 2**

Vibration Meter Probe Positions					
	1	2	3	4	5
A					
B					
C					


A—Pre-Startup Check completed by: \_\_\_\_\_ Date \_\_\_\_\_

B—Eight Hour Post-Startup Check completed by: \_\_\_\_\_ Date \_\_\_\_\_

C—Three-Day Post-Startup Check completed by: \_\_\_\_\_ Date \_\_\_\_\_

---

operation

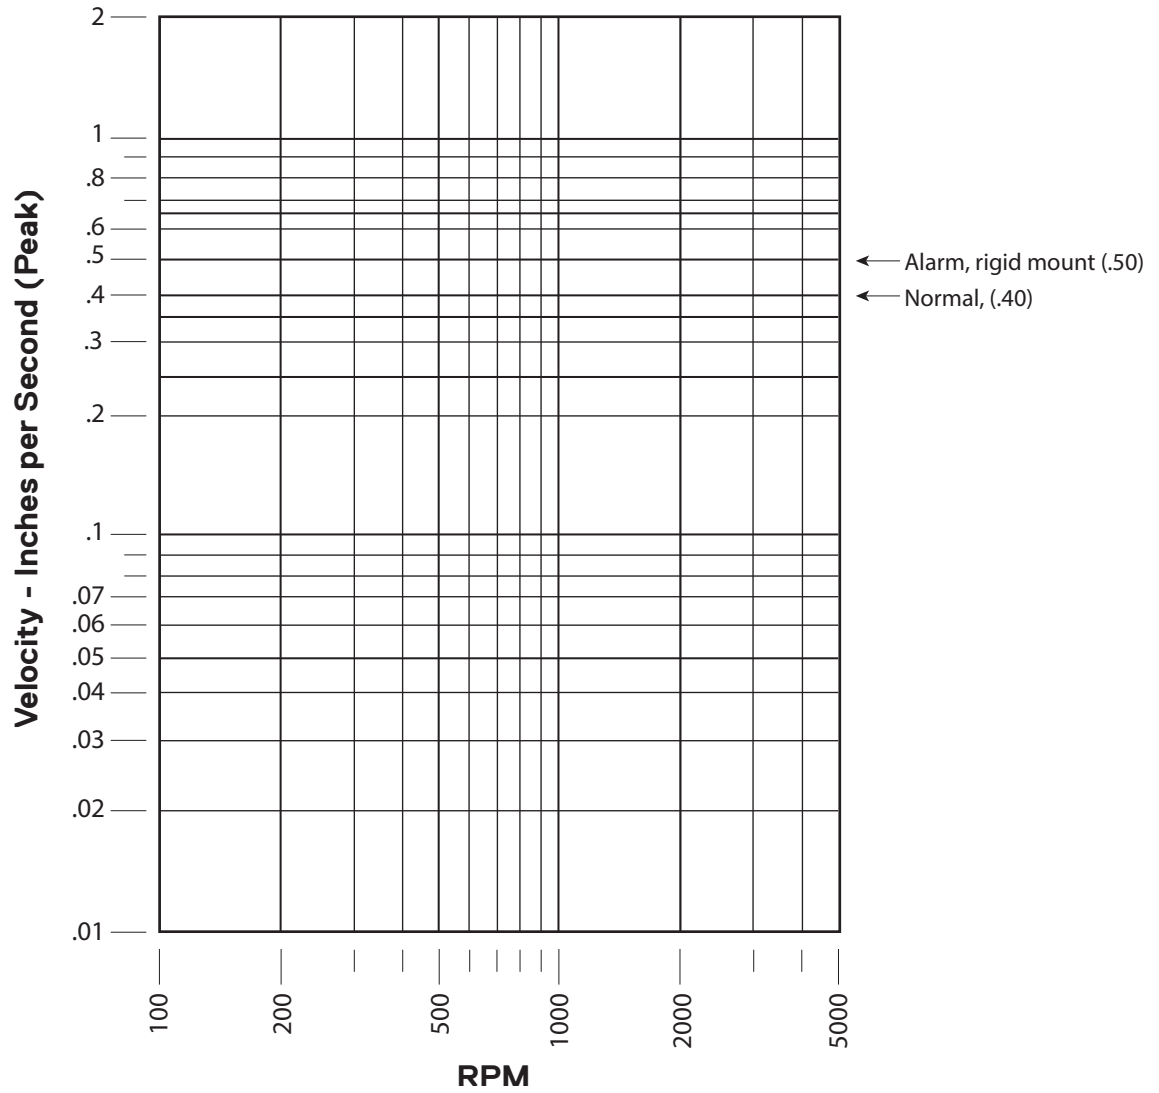

---

Figure 3

---

Vibration Severity Graph

---

## maintenance

---

### **Routine Inspection and Maintenance**

Periodic inspection of all the blower parts is the key to good maintenance and trouble-free operation. The frequency of inspections must be determined by the user and is dependent upon the severity of the application, **but**, it should **never** exceed a 12 month period. The user should prepare an inspection and maintenance schedule and make sure it is adhered to.

---

#### **⚠ Caution**

***Before starting any inspection or maintenance, be sure blower is turned off, power is locked out and the blower wheel has been carefully secured to prevent wind milling. If the operating conditions of the blower are to be changed (speed, pressure, temperature, etc.) consult Cincinnati Fan or our sales office in your territory to determine if the unit will operate safely at the new conditions.***

#### **Hardware**

All blower and foundation hardware should be checked to make sure it is tight. All set screws or taper-lock bushing bolts should be tightened to the torque values shown in **Tables 1** and **2**.

---

#### **Note**

***If any set screws have become loose, they must be replaced. Never use set screws more than once. Replace with knurled, cup-point set screws with a nylon locking patch.***

#### **Motor Bearing Lubrication**

Most smaller motors have sealed bearings that never require re-lubrication for the life of the motor. For any motors with grease fittings, consult the motor manufacturers recommendations with reference to the lubrication frequency and the type of grease that should be used.

**Do Not** over grease the motor bearings. Generally, 1-2 shots should be enough. Use a hand operated grease gun at no more than 40 PSI. **If possible carefully** lubricate the motor bearings while the motor is running.

---

#### **Note**

#### **Wheel Balance**

All blower wheels are balanced at the factory. It is not uncommon that additional "trim balancing" is required after the blower is assembled. Trim balancing of the blower assembly, in the field, is typically always necessary for all replacement wheels. After any wheel is installed, the final balance of the entire blower assembly should be checked. Refer to the **Vibration Section** and **Figure 3**.

Airstream material or chemicals can cause abrasion or corrosion of the blower parts. This wear is generally uneven and, over time, will lead to the wheel becoming unbalanced causing excessive vibration. When that happens, the



---

## maintenance

wheel must be rebalanced or replaced. Other airstream components should also be inspected for wear or structural damage and cleaned or replaced if necessary. **After cleaning any blower wheel, it should be balanced and then “trim balanced” on the motor shaft.**

There are three ways to balance a blower wheel:

1. **Add balancing weights for fabricated aluminum, steel or stainless steel wheels:** Balance weights should be rigidly attached to the wheel at a location that will not interfere with the blower housing nor disrupt air flow. They should (if at all possible) be welded to the wheel. When trim balancing the wheel, on the blower shaft, be sure to ground the welder directly to the wheel. Otherwise, the welding current will likely pass through the blower shaft and damage the blower and/or motor bearings.
2. **Grinding of material for cast aluminum wheels** (on some models only). If grinding on the wheel to remove material, be very careful not to grind too much in one area which could affect the structural integrity of the wheel.
3. **Forward curved wheels, Models LM and LMF only** (also known as squirrel cage or multivane wheels. These wheels have balancing clips attached to individual blades around the wheel. That is the only proper way to balance this type of wheel.

---

### Note

*Removing any Forward Curved, Backward Inclined or Airfoil wheel from the blower requires special attention when reinstalling the wheel back into the blower housing. Make sure you reinstall the wheel so the proper wheel-to-inlet clearance is maintained. Failure to do this will affect the blower’s airflow (CFM), and/or static pressure (SP) capabilities and efficiency. Consult Cincinnati Fan or our local sales office for your area for assistance if necessary.*

### Vibration

As mentioned previously in this manual, excessive vibration can cause premature motor failure that could lead to catastrophic failure of the blower. After performing any routine maintenance, the vibration readings should be taken. New readings should be taken (maximum every 12 months) and compared to the readings you recorded in **Figure 2** during the initial startup. If any major differences are present, the cause should be determined and corrected before the blower is put back into operation.

The most common causes of vibration problems are:

- Wheel unbalance
- Mechanical looseness
- Foundation stiffness
- Poor blower inlet and/or discharge conditions

---

## maintenance

### **Dampers and Valves** Airflow control device

**Turn off and lock out power to the blower motor.** Any dampers or valves should be periodically inspected to make sure all parts are still operable within their full range and there is no interference with any other damper or blower components. Any bearings or seals should be checked for their proper function. The manufacturers maintenance instructions should be followed.

### **Safety Equipment and Accessories**

It is the user's responsibility to make sure that any safety guards required by company, local, state and OSHA regulations are properly attached and fully functional at all times. If any guards become defective or non-functional at any time, the power to the blower **must** be turned off and locked-out until complete repairs and/or replacements have been made, installed and inspected by authorized personnel. Any accessories used in conjunction with the blower should also be inspected to make sure they are functioning within their intended limits and design specifications. The manufacturer's maintenance manuals should be referred to for correct maintenance procedures. These accessories include, but are not limited to, the following:

- Shaft seals, inspection doors, vibration isolators or vibration bases, air flow or pressure measuring equipment, hoods, controls, special coatings, silencers, expansion joints, valves, flexible connectors and filters.

### **Replacement Parts**

Under normal conditions, you should not need any spare or replacement parts for at least 24 months after shipment from Cincinnati Fan. That does not include any wear due to abrasion, corrosion, excessive temperatures, abuse, misuse, accident or any severe conditions the fan was not designed for.

- If this blower is vital to any process that could cost you lost revenue, we strongly recommend that you keep a blower wheel and motor at your location.
- If this blower is vital for the safety of any people and/or animals, we strongly recommend that you keep a complete blower/motor assembly, as originally ordered, at your location.

To order parts or complete units, contact us for the name of our sales office in your area or locate them on our website at [cincinnati.com](http://cincinnati.com).

***The blower serial number from the blower name plate is required to identify parts correctly.***

---

**Note**

---

**Note**

# maintenance

## Troubleshooting

Potential problems and causes listed below are in no order of importance or priority. The causes are only a list of the most common items to check to correct a problem. If you find the cause of a problem, **do not** assume it is the **only** cause of that problem. Different problems can have the same causes.

**⚠ Warning**

***Troubleshooting should only be performed by trained personnel. Any potential electrical problems should only be checked by a licensed electrician. All safety rules, regulations and procedures must be followed.***

Trouble	Cause
Excessive Vibration	Loose mounting bolts, set screws or taper-lock hub bolts, bearings and sheaves
	Worn or corroded blower wheel
	Accumulation of foreign material on blower wheel
	Bent motor shaft
	Worn motor bearings
	Motor out of balance
	Inadequate structural support
	Support structure not sufficiently cross braced
Airflow (CFM) Too Low	Weak or resonant foundation
	Foundation not flat and level
	Blower wheel turning in wrong direction (rotation)
	Actual system static pressure (SP) is higher than expected
	Motor speed (RPM) to low
	Dampers or valves not adjusted properly
	Leaks or obstructions in duct work.
	Filters dirty
Airflow (CFM) Too High	Inlet and/or discharge guards are clogged
	Duct elbow too close to blower inlet and/or discharge
	Improperly designed duct work
	Blower wheel not properly located relative to the inlet bell (Models LM and LMF only)
	Actual system static pressure (SP) is lower than expected
	Motor speed (RPM) to low
Motor Overheating	Filter not in place
	Dampers or valves not adjusted properly
	Actual system static pressure (SP) is lower than expected
	Voltage supplied to motor is too high or too low
	Motor speed (RPM) too high or defective motor
	Air density higher than expected
Motor wired incorrectly and/or loose wiring connections	
Cooling fan cover on back of motor is clogged (fan cooled motors)	
Note – a normal motor will operate at 174°F	



## maintenance

Excessive Noise	Wheel rubbing inside of housing
	Worn or corroded blower wheel
	Accumulation of foreign material on blower wheel
	Loose mounting bolts, set screws or taper-lock hub bolts, bearings or sheaves
	Bent motor shaft
	Worn motor bearings
	Motor out of balance
	Motor bearings need lubrication
	Vibration originating elsewhere in system
	System resonance or pulsation
	Inadequate or faulty design of blower support structure
Fan Doesn't Operate	Blower operating near stall condition due to incorrect system design or installation
	Motor wired incorrectly or loose wiring connections
	Incorrect voltage supply
	Defective fuses or circuit breakers
	Power turned of elsewhere
	Motor wired incorrectly or loose wiring connections
Defective motor	

### Long Term Storage

Storage exceeding 30 days after receipt of equipment.

#### Note

***Failure to adhere to these instructions voids all warranties in their entirety.***

- Storage site selection:
  - Level, well-drained, firm surface, in clean, dry and warm location. Minimum temperature of 50°F (10°C).
  - Isolated from possibility of physical damage from construction vehicles, erection equipment, etc.
  - Accessible for periodical inspection and maintenance.
- The blower should be supported under each corner of its base to allow it to “breathe”. Supports (2 x 4s, timbers, or railroad ties) should be placed diagonally under each corner.
- If the equipment is to be stored for more than three (3) months, the entire blower assembly must be loosely covered with plastic, **but not tightly wrapped**.
- Storage Maintenance:

#### Note

***A periodic inspection and maintenance log, by date and action taken, must be developed and maintained for each blower. See example below. Each item must be checked monthly.***

---

## maintenance

Storage/Maintenance Schedule Log Example	
Action	Date Checked
Reinspect units to insure any protective devices used are functioning properly. Check for scratches in the finish which will allow corrosion or rust to form	
Rotate blower wheel a minimum of 10 full revolutions to keep the motor bearing grease from separating and drying. <b>This is a critical step.</b>	

- General Motor Procedure:

If the motor is not put into service immediately, the motor must be stored in a clean, dry, warm location. Minimum temperature of 50°F. (10°C,). Several precautionary steps must be performed to avoid motor damage during storage.

- Use a “Megger” each month to ensure that integrity of the winding insulation has been maintained. Record the Megger readings. Immediately investigate any significant drop in insulation resistance.
- **Do not** lubricate the motor bearings during storage. Motor bearings are packed with grease at the factory. Excessive grease can damage the insulation quality in the motor.
- If the storage location is damp or humid, the motor windings must be protected from moisture. This can be done by applying power to the motor’s space heaters, (if available) while the motor is in storage. If the motor does not have space heaters, storing it in a damp or humid location will, very quickly, cause internal corrosion and motor failure which is not warranted.
- Rotate motor shaft a minimum of 10 full turns each month to keep bearing grease from separating and drying out.

---

### Note

***For specific storage instructions, for the actual motor and any accessory parts that were supplied, refer to the manufacturer’s instructions.***

---

## information

---

### **Limited Warranty**

Cincinnati Fan and Ventilator Company (Seller) warrants products of its own manufacture, against defects of material and workman-ship under normal use and service for a period of eighteen (18) months from date of shipment or twelve (12) months from date of installation, whichever occurs first. This warranty does not apply to any of Seller's products or any part thereof which has been subject to extraordinary wear and tear, improper installation, accident, abuse, misuse, overloading, negligence or alteration. This warranty does not cover systems or materials not of Seller's manufacture. On products furnished by Seller, but manufactured by others, such as motors, Seller extends the same warranty as Seller received from the manufacturer thereof. Expenses incurred by Purchaser's in repairing or replacing any defective product will not be allowed except where authorized in writing and signed by an officer of the Seller.

The obligation of the Seller under this warranty shall be limited to repairing or replacing F.O.B. the Seller's plant, or allowing credit at Seller's option.

**This warranty is expressly in lieu of all other warranties either expressed or implied including the warranties of merchantability and fitness for a particular purpose and of all other obligations and liabilities of the seller. The purchaser acknowledges that no other representations were made to purchaser or relied upon by purchaser with respect to the quality or function of the products herein sold.**

Removal of the Sellers nameplate or any generic fan nameplate containing the fan serial number voids all warranties, either writ-ten or implied. Failure to complete and document all the pre-startup and post startup checks and perform the suggested routine maintenance checks voids all warranties, either written or implied.

---

information

---

### **Limitation of Liability**

Notice of any claim, including a claim for defect in material or workmanship, must be given to Seller in writing within 30 days after receipt of the equipment or other products. Seller reserves the right to inspect any alleged defect at Purchaser's facility before any claim can be allowed and before adjustment, credit, allowance replacement or return will be authorized. See RETURNS below. Seller's liability with respect to such defects will be limited to the replacement, free of charge, of parts returned at Purchaser's expense F.O.B. Seller's plant and found to be defective by the Seller.

**In no event will seller be liable for special, indirect, incidental or consequential damages, whether in contract, tort, negligence, strict liability or otherwise, including without limitation damages for injury to persons or property, lost profits or revenue, lost sales or loss of use of any product sold hereunder. Purchaser's sole and exclusive remedy against seller will be the replacement of defective parts as provided herein or refund of the purchase price for defective products, at seller's sole option. Seller's liability on any claim, whether in contract, tort, negligence, strict liability or otherwise, for any loss or damage arising out of or in connection with purchaser's order or the products or equipment purchased hereunder, shall in no case exceed the purchase price of the equipment giving rise to the claim.**

---

## information

---

### **Responsibly**

It is the understanding of the Seller that Purchaser and/or User will use this equipment in conjunction with additional equipment or accessories to comply with all Federal, State and local regulations. The Seller assumes no responsibility for the Purchaser's and/or User's compliance with any Federal, State and local regulations.

---

### **Returns**

Cincinnati Fan & Ventilator Company assumes no responsibility for any material returned to our plant without our permission. An RMA (Return Material Authorization) number must be obtained and clearly shown on the outside of the carton or crate and on a packing slip. Any items returned must be shipped freight prepaid. Failure to comply will result in refusal of the shipment at our receiving department.

---

### **Disclaimer**

This manual, and all its content herein, is based on all applicable known material at the time this manual was created. **Any parts of this manual are subject to change at any time and without notice.**

If any statements, diagrams and/or instructions contained herein, for components not manufactured by the Seller, conflict with instructions in the manufacturer's manual (i.e.: motors, bearings, dampers, etc.), the instructions in the manufacturer's manual, for that component take precedent.

Should you want the latest version of this manual, please contact us or our sales office for your area. Or, you can print a current version by going to our website at [cincinnati.com](http://cincinnati.com).



---

## information

---

### **Parts Drawing**

Cincinnati Fan manufactures many models and arrangements with special variations. For that reason, the maintenance manuals contained on our website do not include a parts drawing nor the completed blower or fan specifications on page 2. For the parts drawing of all the standard components and specifications for the specific blower or fan that you have, please contact our local Cincinnati Fan sales office for your area.

You will need to give them the serial number shown on the blower or fan nameplate so they can supply you the correct information.

Click on "Contact a Sales Rep" on our website for the name and contact information for our local sales office for your area at [cincinnati-fan.com](http://cincinnati-fan.com).





# Centrifugal Blower

USER MANUAL

---

**SPX ENGINEERED AIR MOVEMENT**

7697 SNIDER ROAD  
MASON, OH 45040 USA  
513 573 1000 | [spxairmovement.com](http://spxairmovement.com)

CF-09-IOM-24 | ISSUED 05/2024  
©2024 SPX ENGINEERED AIR MOVEMENT | ALL RIGHTS RESERVED  
In the interest of technological progress, all products are subject to design and/or material change without notice.

